KitchenAid®

COOKTOP PARTS

For Models: YKERI203PW0, YKERI203PT0
(White) (Biscuit)

30" ELECTRIC CERAN
FREE STANDING RANGE
CONVECTION OVEN

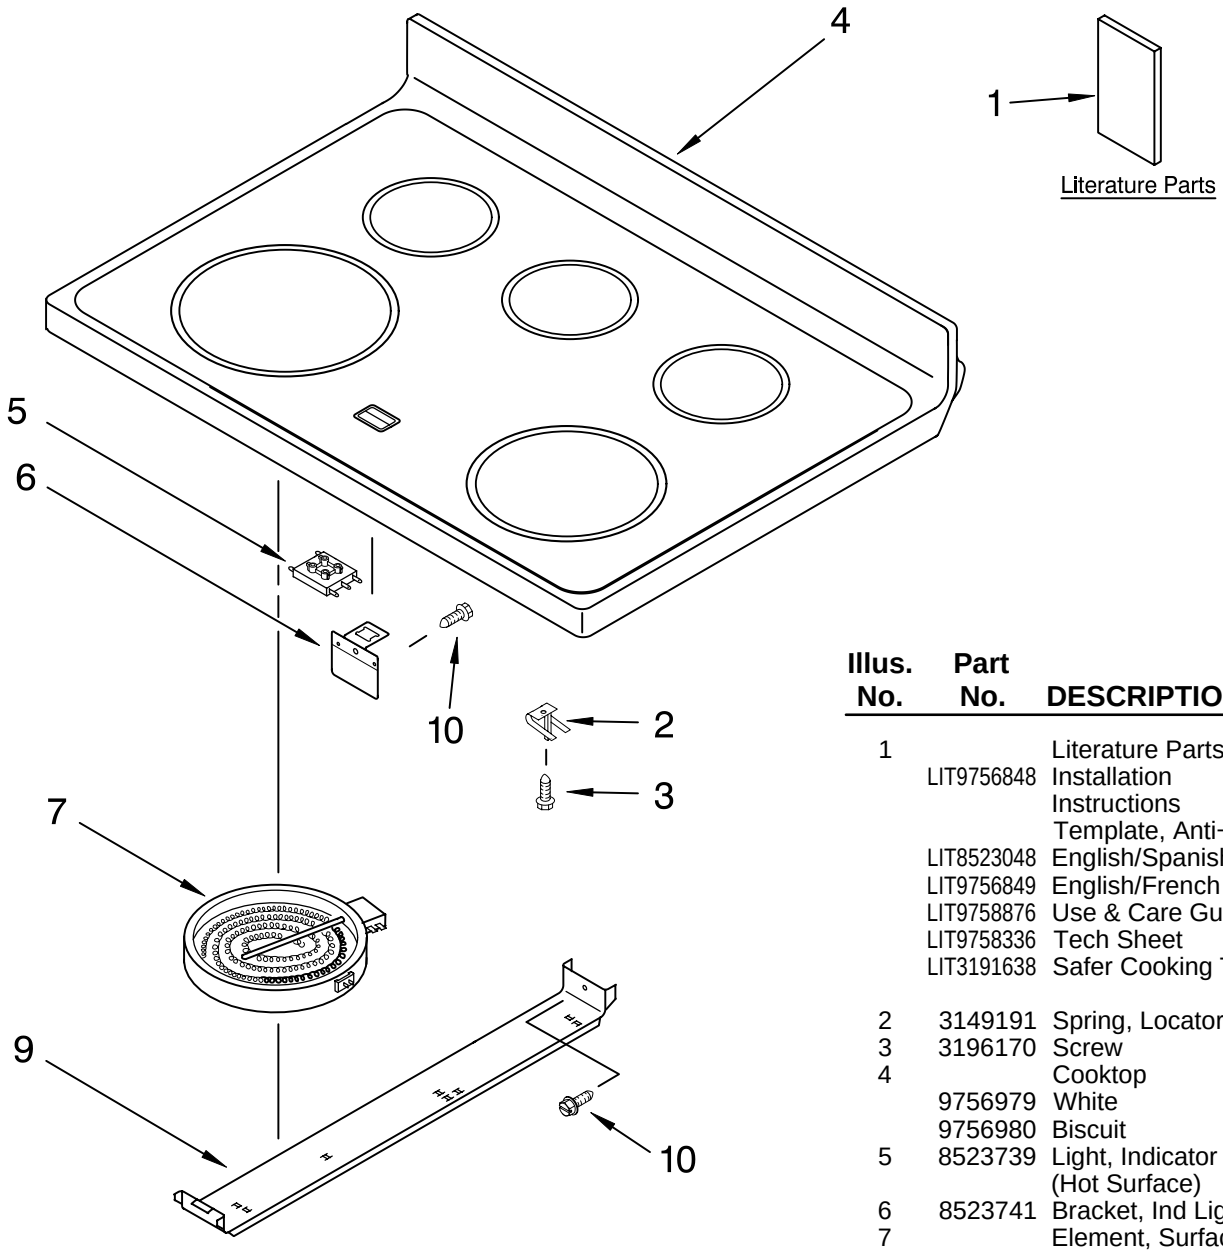

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9756848	Installation Instructions Template, Anti−Tip
	LIT8523048	English/Spanish
	LIT9756849	English/French
	LIT9758876	Use & Care Guide
	LIT9758336	Tech Sheet
	LIT3191638	Safer Cooking Tips
2	3149191	Spring, Locator
3	3196170	Screw
4		Cooktop
	9756979	White
	9756980	Biscuit
5	8523739	Light, Indicator (Hot Surface)
6	8523741	Bracket, Ind Light
7		Element, Surface
	9757027	2500/1000 W − LF
	8273994	1200 W − LR
	8273993	1800 W − RF
	9757031	1800/800 W − RR
	9757028	100 W − CR
9		Bracket, Element
	8272791	(2)
	8273720	(1)
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: YKERI203PW0, YKERI203PT0

(White) (Biscuit)

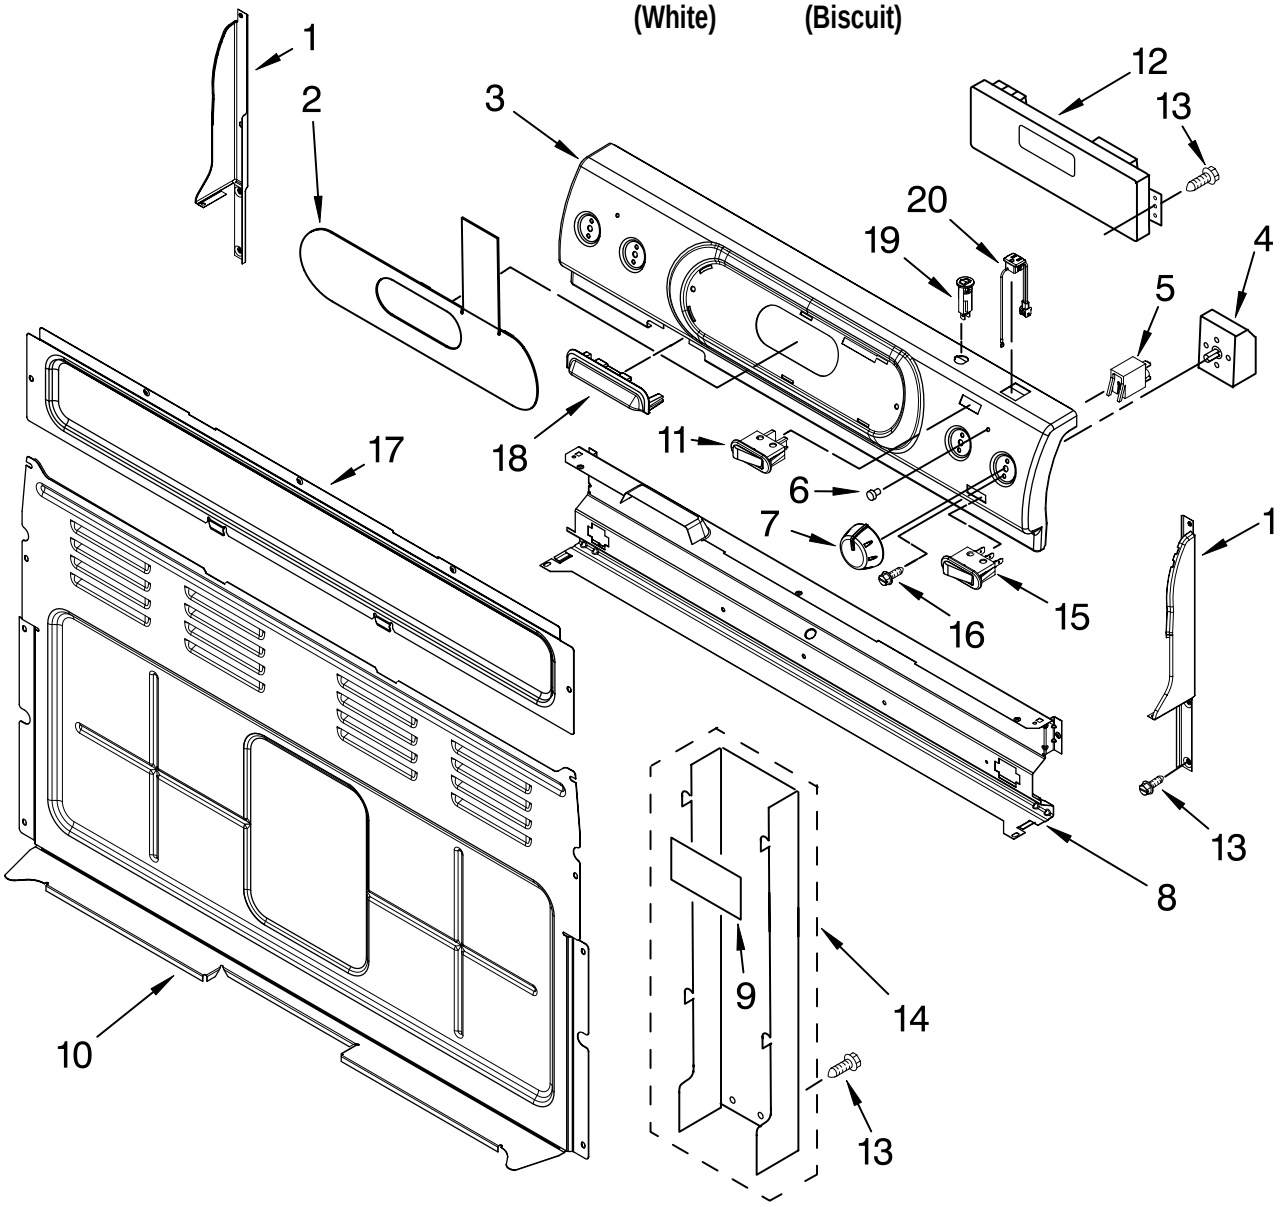

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	9756959	White Left Hand
	9756958	White Right Hand
	9756963	Biscuit Left Hand
	9756962	Biscuit Right Hand
2		Membrane Switch
	9756532	White
	9756533	Biscuit
3		Panel, Backguard
	9756734	White
	9756726	Biscuit
4		Switch, Infinite
	9757030	LF (Dual)
	3148953	RF/RR (Green)
	3148952	LR (Yellow)
5	8523266	Light, Indicator
6	3196068	Lens, Light (2)
7		Knob (4)
	9756941	White
	9756942	Biscuit
8	9756934	Shield, Heat
9	9757309	Card, Insulation
10	9756999	Cover, Rear
11		Switch, Simmer
	9757407WH	White
	9757407BT	Biscuit
12	9756548	Control, Range
13	3196178	Screw
14	9757965	Cover, Box
15		Switch, Warming
	9757406WH	White
	9757406BT	Biscuit
16	3400882	Screw
17	9758319	Cover, Rear (Console)
18		Cover, Vent
	9758352	White
	9758353	Biscuit
19		Breaker, 15Amp
	9757601	White
	9757603	Biscuit
20		Receptacle
	9756358	White
	9756360	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: YKERI203PW0, YKERI203PT0

(White) (Biscuit)

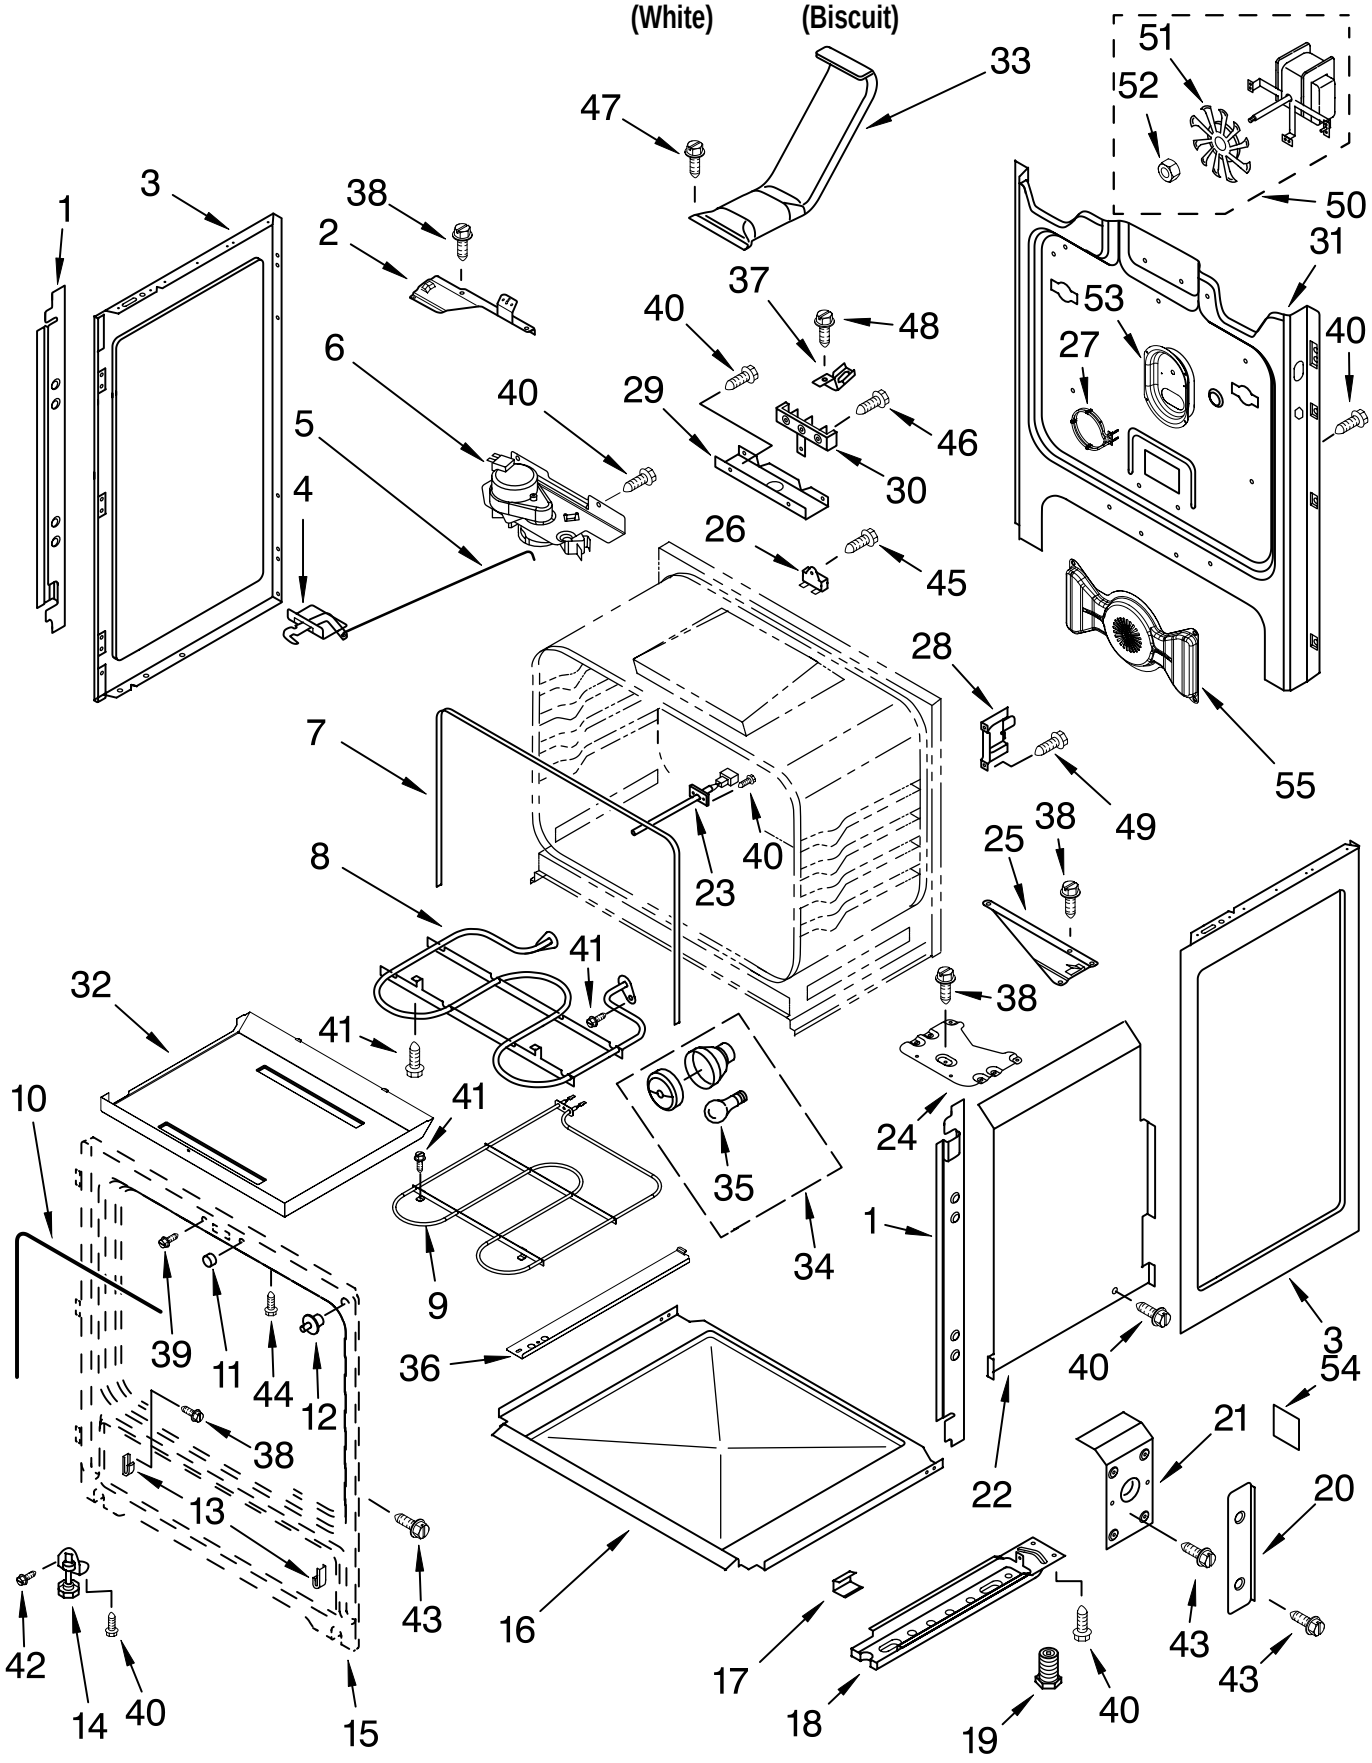

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: YKERI203PW0, YKERI203PT0
(White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3196137	Shield, Heat (2)
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White
	8272519	Biscuit
4	3196119	Latch, Door
5	3196961	Rod, Latch
6	9756913	Latch Ass'y, Rear
7	3195737	Seal, Oven Flange
8	9757341	Element, Broil
9	9755770	Element, Bake Hidden
10	8522416	Seal, Oven Door
11	9758701	Spacer, Door
12	3196262	Switch, Door
13	3195546	Glide, Drawer (2)
14	3196037	Foot, Front (2)
15		Frame, Front (Non−Serviceable)
16	8054068	Tray, Insulation
17	3196576	Clip, Panel (6)
18	8053335	Rail, Base (2)
19	312701	Foot, Rear (2)
20	3196091	Shield, Outer (2)
21	3196092	Shield, Inner (2)
22	8523803	Retainer, Side (2)
23	8273902	Sensor, Oven
24	3195736	Support, Front (2)
25	3195987	Support, Corner RR
26	3196548	Fuse, Thermal
27	9758525	Element, Convection
28	3186116	Support, Oven (2)
29	3186034	Bracket, Service
30	4449868	Block, Terminal
	112432	Nut (3)
31	9757029	Back, Main
32	9755769	Tray, Hidden Bake Element
33	8522673	Flue
34	3196701	Light Socket Assy
35	311255	Bulb, Oven Light
36	9755771	Cover, Tray
37	3169573	Ground Strap
38	3196165	Screw
39	3196168	Screw
40	3196178	Screw
41	3196174	Screw
42	3196179	Screw
43	3196177	Screw
44	3196176	Screw
45	3196172	Screw
46	3400016	Screw
47	3196566	Screw
48	3196173	Screw, Ground
49	3196169	Screw
50	3194261	Fan Motor, Convection
51	4452226	Fan Blade
52	4452227	Nut
53	9755776	Cover, Convection Fan
54	9759689	Card, Insulator
55	9757088	Baffle, Convection

INSULATION

	8272616	Insulation, Wrap
	9755772	Insulation, Back
	8272613	Insulation, Vent

DOOR PARTS

For Models: YKERI203PW0, YKERI203PT0

(White) (Biscuit)

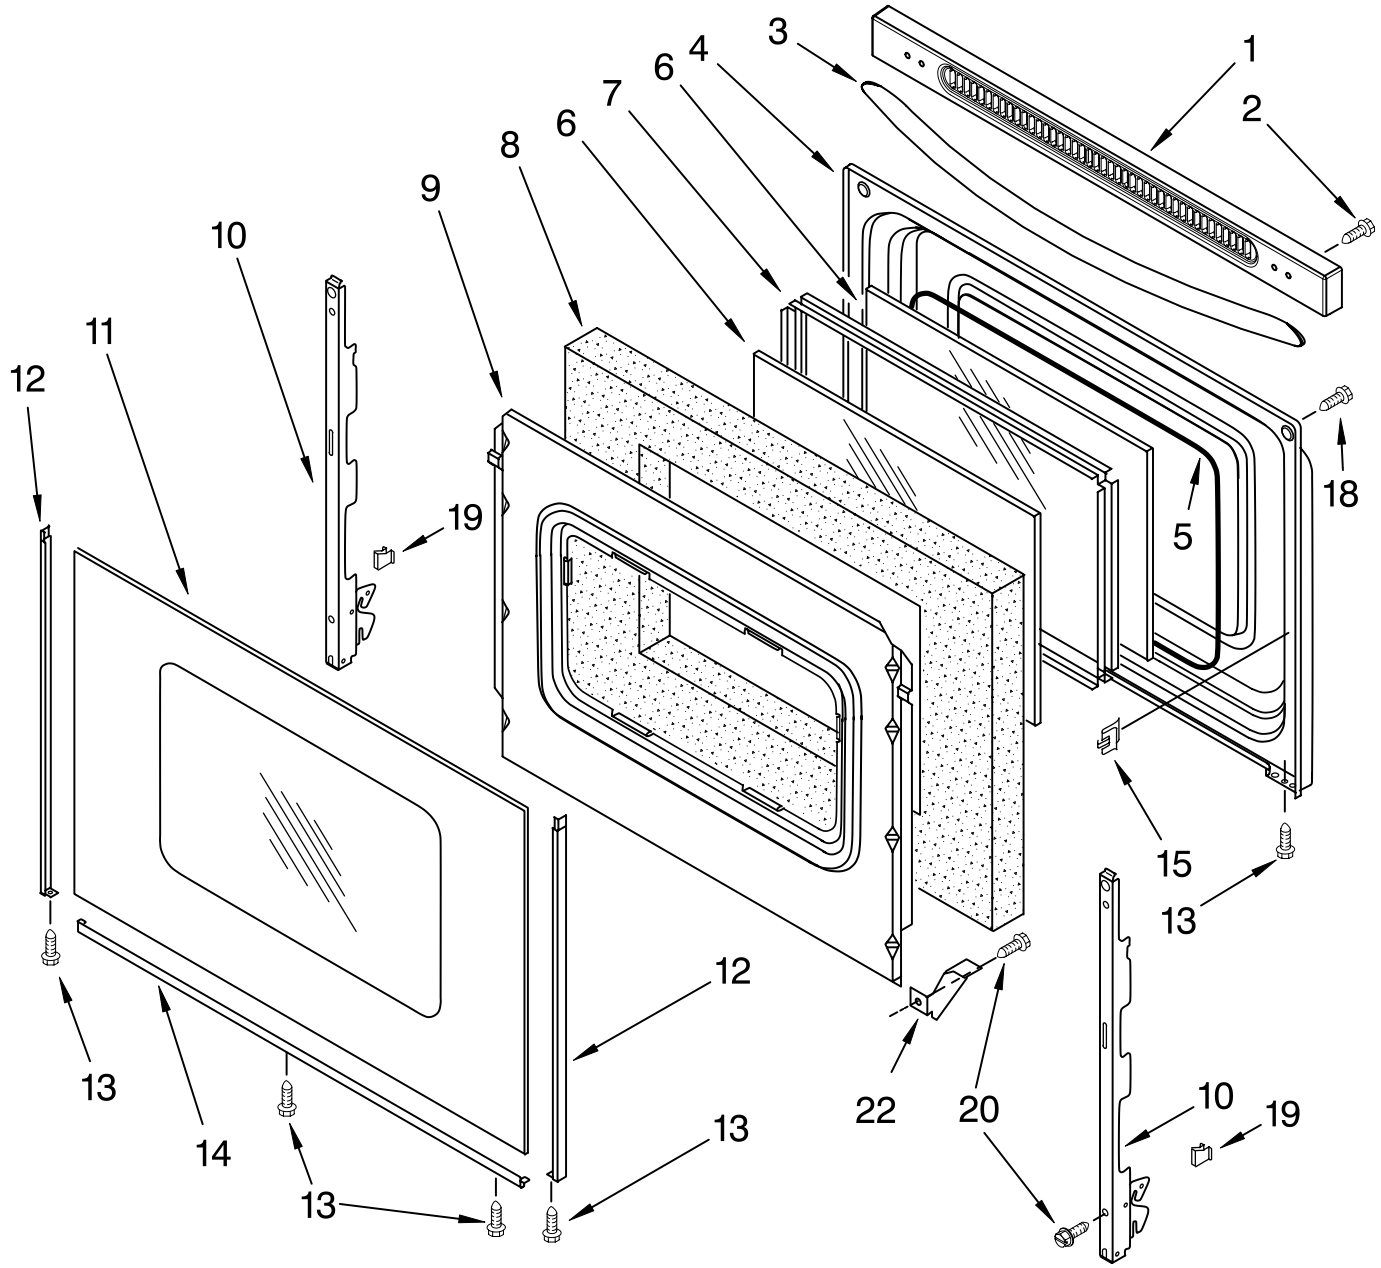

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: YKERI203PW0, YKERI203PT0

(White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Door Top
	9756965	White
	9756966	Biscuit
2	3196164	Screw
3		Handle, Door
	9758339	White
	9758340	Biscuit
4	3186292	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	3186297	Retainer, Insul.
10	8053807	Hinge, Door
11		Glass, Outer Door
	9757039	White
	9757040	Biscuit
12		Trim, Side
	8523172	White Left Hand
	8523166	White Right Hand
	8523173	White Left Hand
	8523167	Biscuit Right Hand
13	3196160	Screw
14		Trim, Lower
	8523175	White
	8523178	Biscuit
15	3196025	Clip, Glass (4)
18	3196161	Screw
19	3196925	Clip, Door Stop
20	3196165	Screw
22	3196794	Bracket, Window(2)

DRAWER & BROILER PARTS

For Models: YKERI203PW0, YKERI203PT0
(White) (Biscuit)

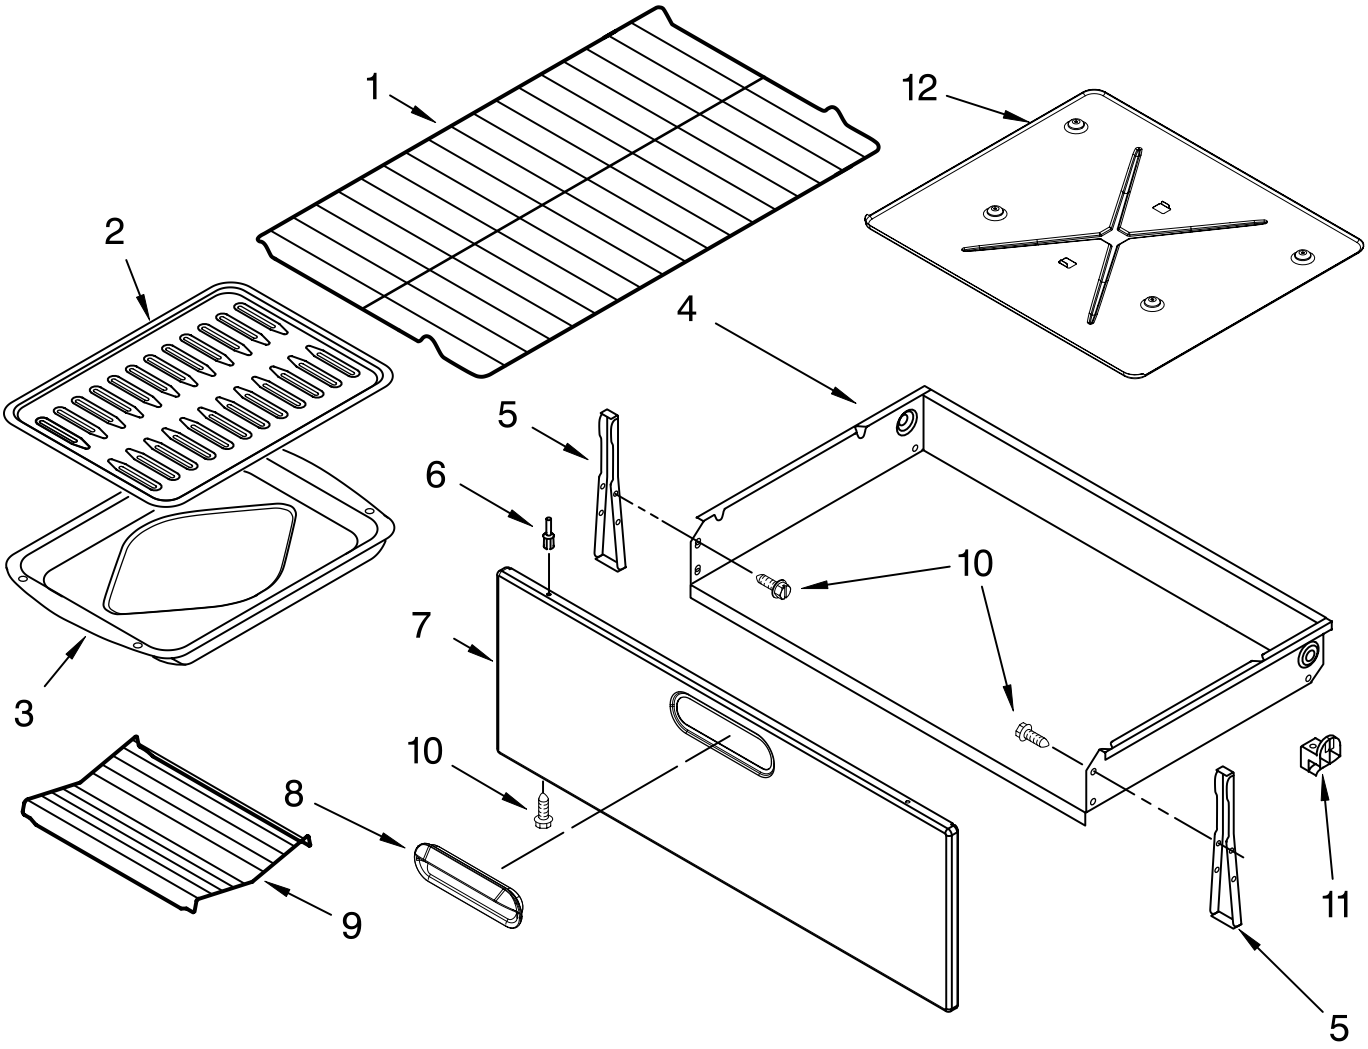

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (3)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272605	Drawer, Storage
5	3196816	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
7		Panel, Drawer Frnt
	9756325	White
	9756326	Biscuit
8		Handle, Drawer
	9756952WH	White
	9756952BT	Biscuit
9	3181534	Rack, Roasting
10	3196168	Screw
11	8053334	Spacer, Glide
12	9756711	Heat Shield Drawer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: YKERI203PW0, YKERI203PT0
(White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
8316781	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242827	Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2"
313660	Clip, Ground Wire x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
4456147	Cleaner, Glass
2261590	Cleaner (Stainless Steel)

ANTI−TIP KIT

3176830	Anti−Tip Kit

WIRING HARNESS PARTS

4454240	Harness, ACCBK1
9756350	Power Cord
9756779	Strain Relief
313438	Clip, Wire Harness
9757044	Harness, Oven
9756745	Harness, Cooktop (Left w/Dual)
9757332	Harness, Cooktop (Right w/ wm)
9759577	Harness, Console
9757339	Harness, Bake Element (Hidden)
3196696	Clip, Wire Harness
8273266	Harness, Wire (Door Switch)
8524132	Shield, Wiring (2)
8523279	Wire, Ground
3196173	Screw
3196154	Screw, Ground

Miscellaneous

3196897	Pin Kit−Dr Removal